



Panel assembly

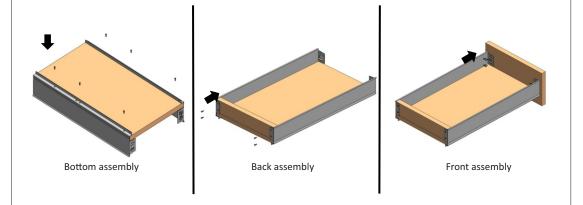

Adjustment Direction & Tolerance

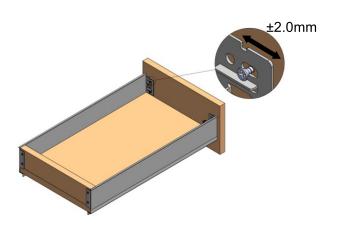

Cover Cap Assembly & Removal

